




Avvertenze

Connessione e manutenzione:

-  Collegare sempre l'apparecchio ad un impianto elettrico costruito nel rispetto della vigente normativa nazionale. Verificare che la presa di corrente sia dotata di messa a terra e adeguata alla tensione e potenza nominale dell'apparecchio (Vedi dati di targa).
-  Disconnettere sempre l'apparecchio dall'impianto elettrico prima di qualunque operazione di manutenzione o pulizia. Attendere sempre il completo raffreddamento. Non usare detersivi di qualsiasi tipo per la pulizia dell'apparecchio.
-  Accertarsi che l'apparecchio sia completamente asciutto prima di ricollegarlo alla presa di corrente. Mantenere pulite e prive di ogni tipo di corpi estranei le prese d'aria degli elementi riscaldanti. Non coprire con salviette o asciugamani. È fatto divieto usare l'apparecchio per scopi diversi da quello per cui è stato progettato.
-  In caso di guasti o malfunzionamento rivolgersi sempre a personale esperto e qualificato.



Istruzioni d'uso

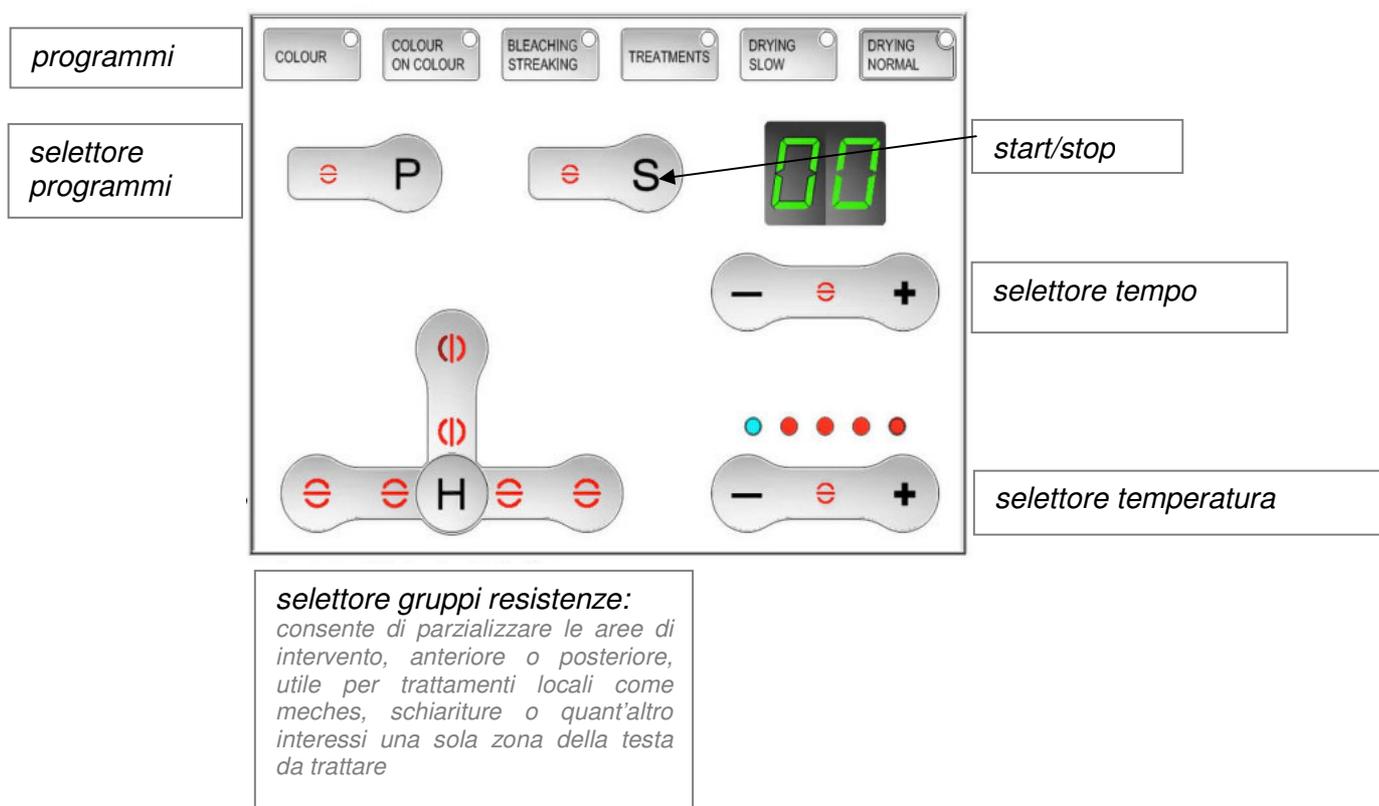

Collegare l'apparecchio alla presa di corrente (vedi avvertenze).

Azionare l'interruttore principale posto nella parte inferiore della tastiera. Tutti i led si accenderanno brevemente, l'apparecchio emetterà un breve "beep" quindi il display visualizzerà un punto luminoso acceso. E' possibile a questo punto scegliere il tipo di lavoro da eseguire.

PEARL ha in memoria 6 programmi automatici con parametri pre-impostati che possono essere selezionati in modo sequenziale semplicemente premendo il tasto **P**.

I parametri di tempo e temperatura associati ad ogni programma saranno visualizzati dai rispettivi led e il tempo pre-impostato sarà visualizzato sul display e confermato vocalmente. Una volta scelto il programma desiderato sarà sufficiente avviare l'apparecchio premendo il tasto **start/stop**.

Durante il funzionamento è possibile, se necessario, modificare in qualunque momento i parametri tempo e temperatura associati al programma scelto, in questo caso il led corrispondente al programma si spegnerà ad indicare la modifica apportata.

Se invece si desidera impostare manualmente l'apparecchio è sufficiente scegliere attraverso i tasti +/- sia il tempo di esecuzione che la temperatura desiderata.

La pressione del tasto **start/stop** avvierà l'apparecchio.

Il punto sul display lampeggerà ad indicare che l'apparecchio è in funzione.

Alla fine di ogni ciclo di lavoro le ventole rimarranno in funzione per alcuni secondi in modo da raffreddare le resistenze.

Dopo pochi minuti di non utilizzo PEARL entrerà in posizione di stand-by, indicato da una luce lampeggiante sul display.

Per accenderlo nuovamente premere un qualunque tasto

Installazione "Pearl" a parete

NOTA:

La staffa di ancoraggio del braccio deve essere fissata ad una parete in muratura. Evitare pareti in cartongesso o divisori leggeri. La staffa deve essere posizionata in verticale e bloccata con cemento in modo che la distanza tra il bullone inferiore e il pavimento sia compresa tra cm. 180 e cm. 195. Rimuovere i due dadi e il distanziale "A" solamente a fissaggio ultimato

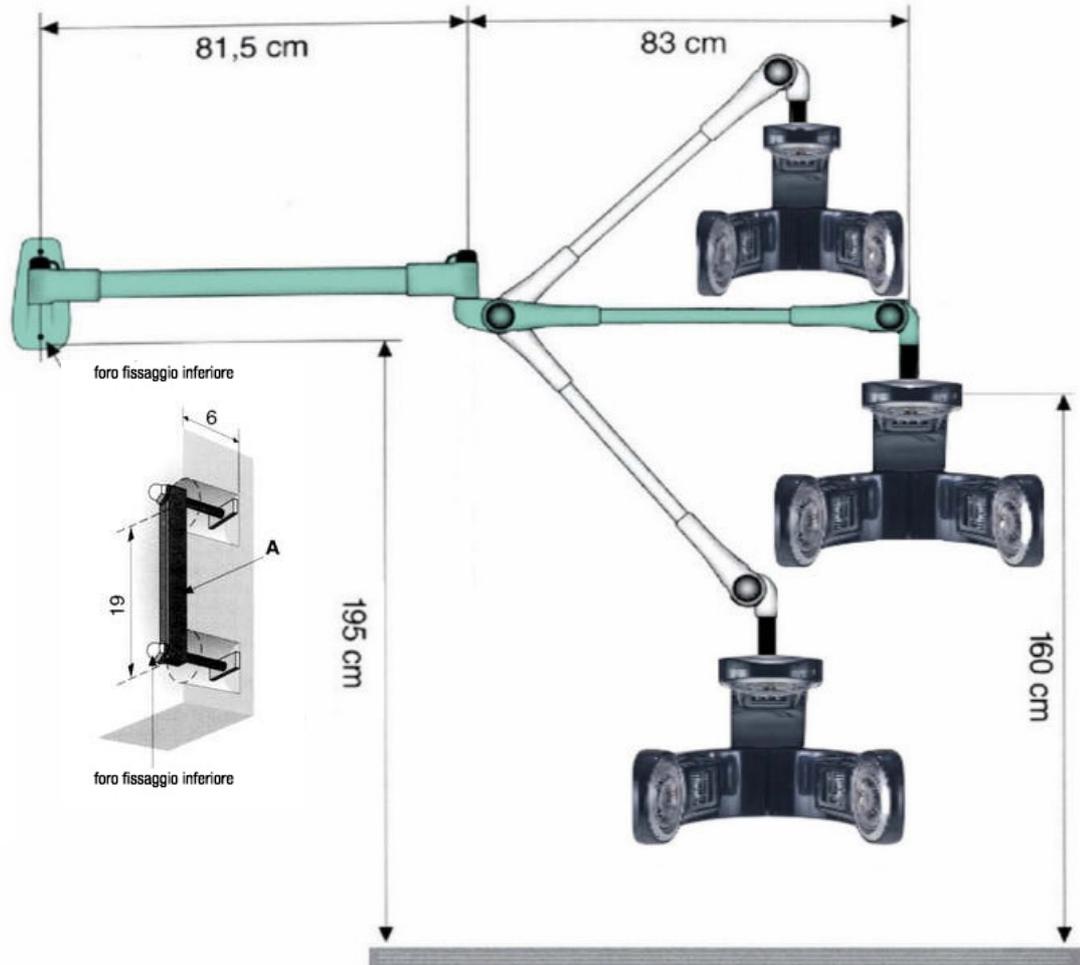


FIG. 3

Togliere la vite "A" e ruotare il cilindro di plastica nera "B". Quindi estrarre la lunetta metallica "C"

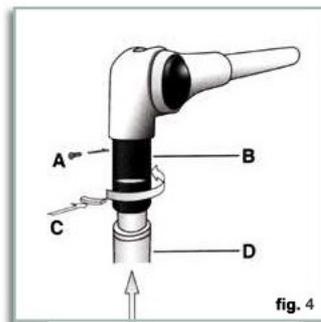


FIG. 4

Inserire lo spinotto dell'apparecchio "D", nel corrispondente spinotto del braccio "B". Quindi riposizionare la lunetta metallica "C" nell'apposita fessura. Rimettere la vite di sicurezza "A", nella parte alta del cilindro di plastica. L'apparecchio (Pearl) è ora fissato sul braccio a muro

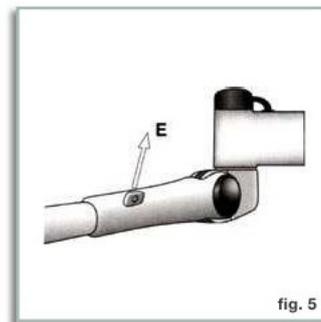


FIG. 5

Con la mano, spingere leggermente verso la parte del braccio a cui è fissato l'apparecchio e contemporaneamente estrarre verso l'alto lo spinotto di sicurezza "E" permettendo così il movimento del braccio.

Tensione di alimentazione	230 V
Frequenza	50 Hz
Potenza massima assorbita	1450 W
Classe di isolamento	1

satellite di David Poggianti
Via Toscana 36/38 – z.i. Gello – 56025 Pontedera (PI)
tel. +39 0587 290506 – fax +39 0587 291097
satellite@sathair.com
www.sathair.com



Warnings

Connection and maintenance



Always connect the appliance to an electrical installation which complies with current national legislation. Check that the electric socket is earthed and suitable for the voltage and power of the appliance (see data plate).



Always disconnect the appliance from the electric socket before cleaning. Always wait for it to be completely cold. Do not use strong detergents or any solvents to clean the appliance. Ensure that the appliance is completely dry before connecting it to the electric socket. Keep it clean and remove any foreign bodies from the air inlet



Do not use the appliance near washing areas or wherever there is water.




The appliance packaging must not be designed or decorated in such a way as to be mistaken by a child for a toy.



In the event of damage or malfunction, always consult a qualified expert technician



Instructions for use

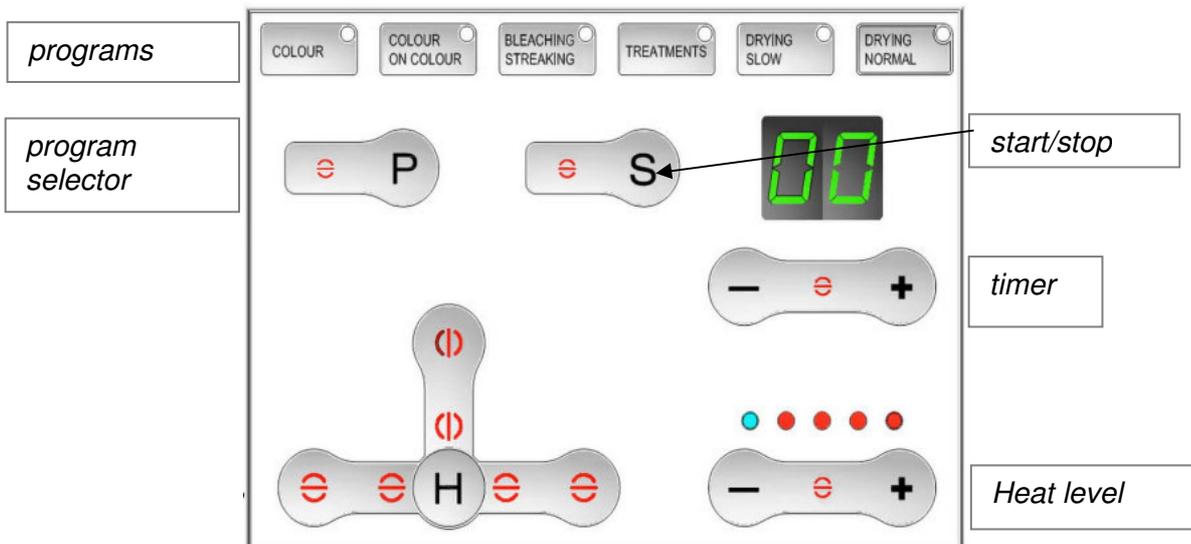

heater selector

In addition to the pre-set programs the location of the heat settings can be set manually. The six heating elements of the Pearl are positioned three of the end of each arm and three more closer to inner part of the arms. These six elements can be set independently (3+3) depending on the hair style and function to be processed.

Connect the appliance to the electrical supply (see warnings).

Press the main switch under the keypad. All the leds will light up briefly. The remote control will beep and the display will show a light.

At this point, you can choose the type of work to be carried out.

The control has a memory storing 6 automatic programmes which can be selected in turn by simply pressing the button "P". The times and temperatures of each programme can be seen on the respective led and the pre-set time can be seen on the display. Once the programme has been chosen, the processor can be started by pressing the **start/stop** button.

The time and temperature of the chosen programme can be changed at any time, if required. In this case the led corresponding to the chosen programme will flash to indicate the change, if instead you wish to set up the hair drier manually, you can choose both the time and temperature by using the +/- buttons. Press the **start/stop** button to start the process. In both cases, a green led indicates that the drier is working.

Pearl processor can be stopped at anytime, even during processes, simply pressing the **start/stop** button. In this case both the fans and heating will also stop. After use it, is quite normal for the fans to continue running for a few seconds, this helps to cool the heating elements.

Pearl will go to "stand-by"(power saving mode) after a few minutes without use.

Only one light flashes on the display to indicate "stand-by". Press any button to restart.

Installation "Pearl" on the wall

NOTE:

The arm anchor rod must be fixed to a solid wall. Do not mount on plasterboard or slim partition walls.

The bracket must be positioned vertically and cement-blocked in order that the distance between the lower bolt and the floor is between 180 and 195 cm.

Remove the two nuts and spacer "A" only after wall mounting is completed.

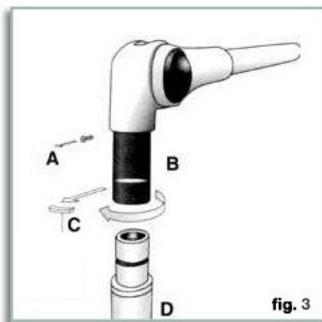
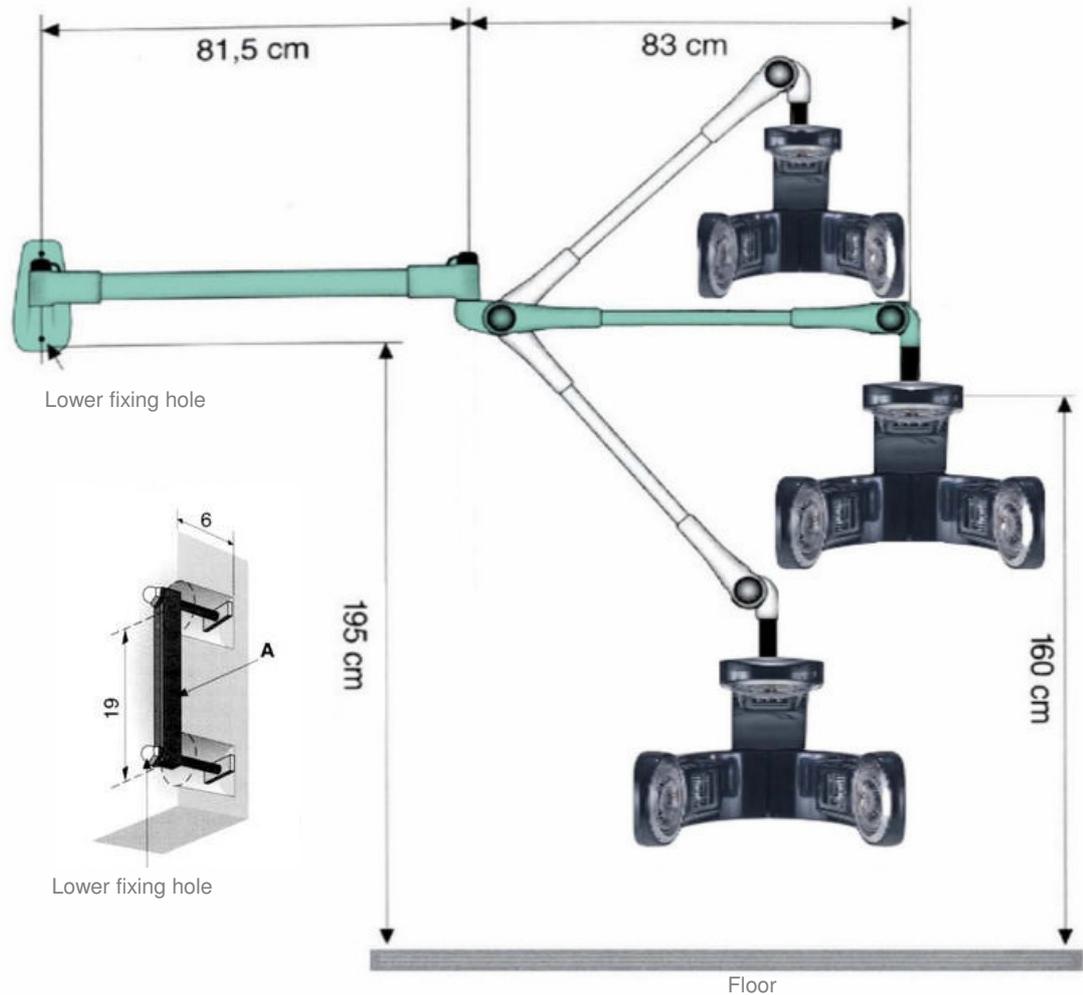


FIG. 3

Remove the screws "A" and rotate the black plastic cylinder "B". Then remove the metal fixing block "C".

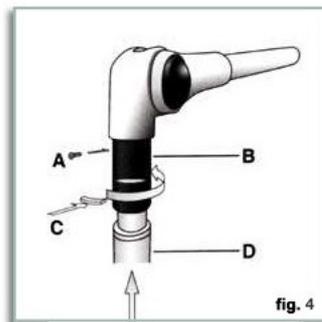


FIG. 4

Insert the appliance connecting rod "D", into the corresponding arm rod "B". Then position the metal fixing block "C" into the special slot. Replace the safety screws "A" in the top section of the plastic cylinder. The appliance (Pearl) is now fixed to the wall bracket.

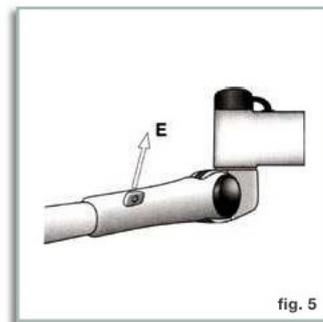


FIG. 5

By hand, lightly push downwards the arm section on which the appliance is fitted and at the same time pull the safety blocking plate "E" upwards in order to allow arm movement.

Supply voltage	230 V
Frequency	50 Hz
Max absorbed current	1450 W
Insulation category	1

satellite di David Poggianti

Via Toscana 36/38 – z.i. Gello – 56025 Pontedera (PI) - ITALY

tel. +39 0587 290506 – fax +39 0587 291097

satellite@sathair.com

www.sathair.com